


L3D Wall mounted DC Charger Installation Guide

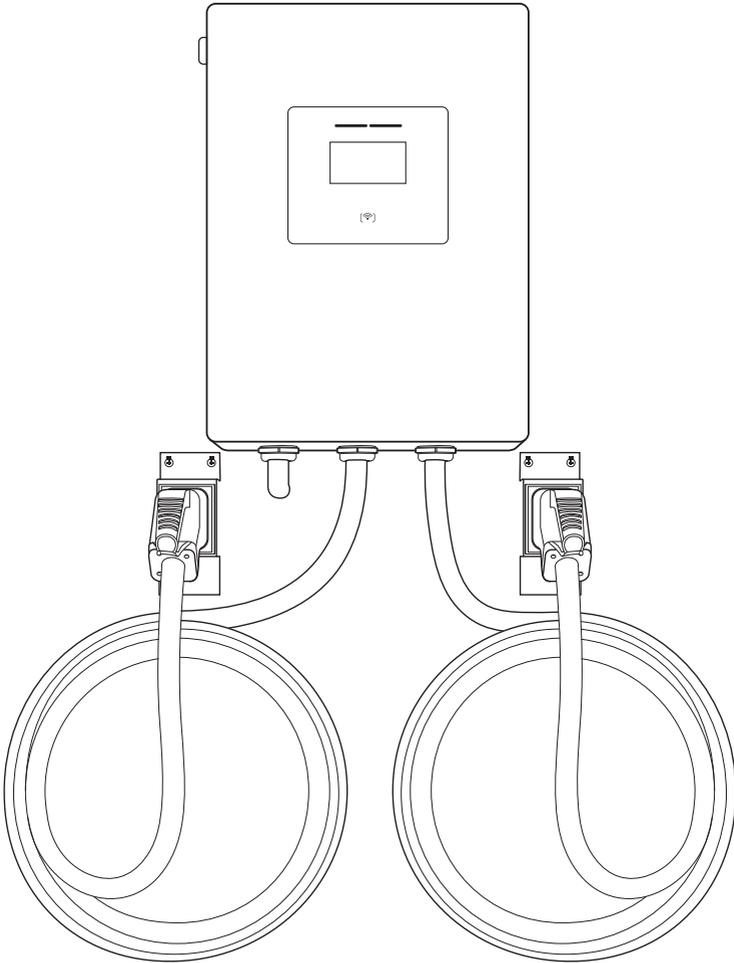

L3D-DC30xyzki
L3D-DC40xyzki
L3D-DC60xyzki

CONTENTS

Applications	1
1. Safety Instructions	1
1.1 Warnings & Cautions.....	2
1.2 SAFETY INSTRUCTIONS.....	3
1.3 Grounding and Safety Requirement.....	4
1.4 Daily Maintenance.....	4
2. Specification	5
2.1 Product Specification	5
2.2 Dimensions.....	6
3. Installation Instruction	7
3.1 Unpack the charger	7
3.2 Accessory	9
3.3 Tools for Mounting.....	9
3.4 Tools for Inspection.....	10
3.5 Mounting on the wall or pedestal.....	11
3.6 Installation Inspection & Debugging.....	15
4. Operation Process	17
4.1 Network Setting.....	17
4.2 Trouble shooting.....	20
5. Maintenance	22
5.1 General Maintenance	22
5.2 Limited Product Warranty.....	24

Introductions

The L3D DC Fast Charger is the top choice to power battery electric vehicles (BEV) and plug-in electric vehicles (PHEV). It is designed for quick charging in both public and private locations, such as retail and commercial parking spaces, fleet charging stations, highway service areas, workplace, residence, etc.

The L3DDC Fast Charger has the advantage of easy installation. The wall-mounted design and plug-in power modules realize flexible and cost-effective installation for different types of locations. The DC Charger also has network communication capability. It is able to connect with remote network systems and provide drivers of electric cars real-time information, such as the location of charging stations, charging progress and billing information. The Wall Mount DC Fast Charger has a clear user interface with function buttons, safety certifications and an excellent waterproof and dust proof design to provide the best choice for outdoor environments.

Features

- ⊙ Wall-Mounted design and plug-in power modules make installation easy and flexible.
- ⊙ Offers customers the convenience of start/stop charging control from an authorized RFID smart card or mobile APP.
- ⊙ Built on latest industry standards for DC charging.
- ⊙ Carries an outdoor rating capable of withstanding solid and liquid intrusions in outdoor settings making the unit more stable and highly reliable.
- ⊙ Provides a high-contrast, screen interface with multi-function buttons.

Applications

- ◇ Public and private parking areas
- ◇ Community parking areas
- ◇ Parking areas of hotels, supermarkets and shopping malls
- ◇ Workplace parking areas
- ◇ Charging stations
- ◇ Highway rest areas

1. Safety Instructions

1.1. Warnings & Cautions

WARNING



To avoid fire, injury or death, read and follow the instructions carefully during installation, operation and maintenance.

DO NOT put fingers into the electric vehicle connector.

DO NOT use this product if the power cord or EV cable is frayed, insulation-broken, or any other signs of damage.

DO NOT use this product if the enclosure or the EV connector is broken, cracked, open, or shows any other indication of damage.

DO NOT remove cover or attempt to open the enclosure because of risk of electric shock.



This device should be supervised when used around children.



This device must be grounded.



To avoid the risk of fire or electric shock, do not use this device with an extension cord.



The suitability of the use of flexible cord in accordance with CE code, part I, rule 4-012, is to be determined by the local inspection authority.



To reduce the risk of fire, connect only to a circuit provided branch circuit over-current protection in accordance with the CSA C22. 1 – 15 Canadian Electrical Code, Part 1 (Canada) or NOM-001-SEDE Electrical installations (utility) (Mexico) or ANSI / NFPA 70 National Electrical Code (USA).

Circuit Breaker Options

Circuit Breaker Options			
Output Power	30kW	40kW	60kW
Circuit Breaker Options (A)	63A	80A	110A

1.2 SAFETY INSTRUCTIONS

Before Installation

- Read all the instructions before using and installing this product.
- Do not use this product if power cable or charging cable have any damage.
- Do not use this product if the enclosure or charging connector are broken or open or if there is damage.
- Do not put any tool, material, finger or other body part into the charging connector or EVconnector.



Warning: The product should be installed only by a licensed contractor and/or licensed technician in accordance with all building codes, electrical codes and safety standards.



Warning: The product should be inspected by a qualified installer prior to initial use. Under no circumstances will compliance with the information in this manual relieve user of his /her responsibilities to comply with all applicable codes and safety standards.

IMPORTANT SAFETY INSTRUCTIONS

- **SAVE THESE INSTRUCTIONS-** This manual contains important instructions that shall be followed during installation, operation and maintenance of the unit.
- Powerfeed must be 3 Phase Wye configuration TT groundings systems.
- The product should be installed in free air area and keep at least 30cm clearance distance to all air vent of the product.
- Need sufficient space for product installation and maintenance, please keep not less than 60cm clearance distance from all around the product.

1.3 Grounding and Safety Requirement

- The product must be connected to a grounded, metal, permanent wiring system. Connections shall comply with all applicable electrical codes.
- Ensure no power is connected at all times when installing, servicing, or maintaining the charger.
- Use appropriate protection when connecting to main power distribution network.
- Use appropriate tools for each task.



CAUTION: The disconnect switch for each un-grounded conductor of AC input shall be provided by installation contractor or technician.



CAUTION: A cord extension set or second cable assembly shall not be used in addition to the cable assembly for connection of the EV to the EVSE.

1.4 Daily Maintenance

CAUTION



Avoid moisture or water in the charger. If there is water or moisture ingress in the charger, it is necessary to immediately power off to avoid immediate danger and notify the professionals to carry out maintenance before next use.



Please use the charger properly. Do not hit or press hard on the enclosure. If it is damaged, please contact a professional technician.



Avoid placing the charger near hot objects and at high temperature locations and away from dangerous substances such as flammable gases and corrosive materials.








To avoid any danger, please do not put any heavy objects on the charger.

2. Specification

2.1 Product Specification

Model Name		L3D-DC30kW	L3D-DC40kW	L3D-DC60kW
Power Input	Phases /Lines	3 Phase+PE+N		
	Voltage	480Vac(±10%)		
	Frequency	60Hz		
Power Output	Charging Outlet	CCS1*2/NACS*2/CCS1+NACS		
	Voltage(DC)	CCS: 200~1000VDC		
	Current(Max)	100A	125A	200A
	Power(Max)	15kW*2/30kW	20kW*2/40kW	30kW*2/60kW
	Measuring accuracy	Level 0.5		
User Interface & Control	Display	LCD 7 inch Touch Screen		
	LED Indicator	Yes		
	Push Buttons	Emergency Button		
	Efficiency	> 95%		
	User Authentication	RFID(ISO/IEC 14443 A/B), APP		
Technical features	RCD	Type AC 30mA		
	Energy Meter	ETL certified		
Communication	Network Interface	Ethernet, Wi-Fi or 3G/4G Optional		
	Communication Protocol	OCPP1.6 J/OCPP2.0.1 Upgradeable		
Environment	Operating Temperature	-22 °F to 122 °F ,will derating from 131 °F or above		
	Humidity	Max.95%(non-regulating)		
	Application place	Indoor/Outdoor		
	Installation method	Wall mount, pedestal mount (optional)		
	Altitude	≤ 6562ft(2000m), No Derating		
	Sound noise	<55DB in all directions		
	IP/IK Level	Type 3R/IK10		
Mechanical	Cabinet Dimension (W×D×H)	25.59"×35.43"×10.63" (650mm×900mm×260mm)		
	Net Weight	165.35lbs(75kgs)		
	Gross Weight	171.96lbs(78kgs)		
	Cable Length	18ft(5.5m)(Standard)		
Safety Protection	Securitydesign	Over/undervoltageprotection,overloadprotection,current leakageprotection,groundingprotection,lighteningsurge Isolation protection		
Certifi cation	Versatility	ConformtoUL2202,UL2231-1/-2		
Warranty		2 years		

2.2 Dimensions

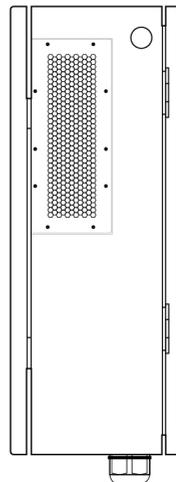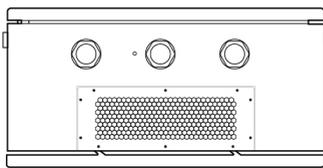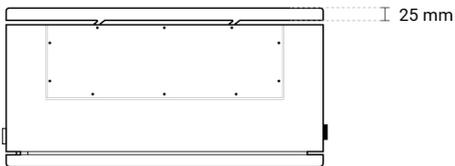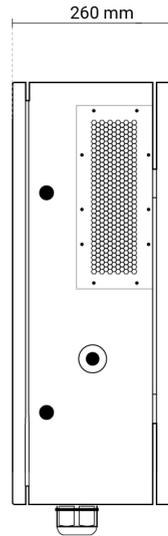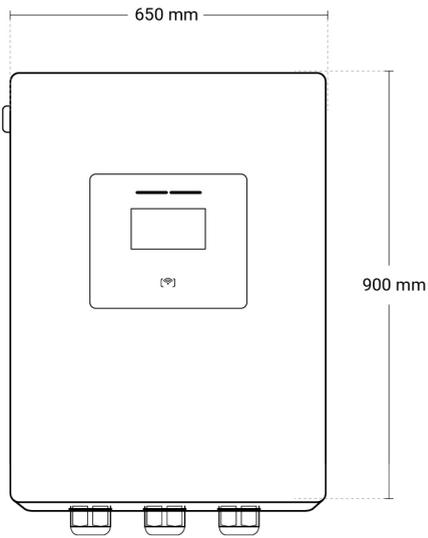

Bottom View

Right View

3. Installation Instruction

3.1 Unpack the charger




WARNING!

Charger weight might >80Kg!

Be careful during unpack process.


STEP 1

Remove the surrounding boards

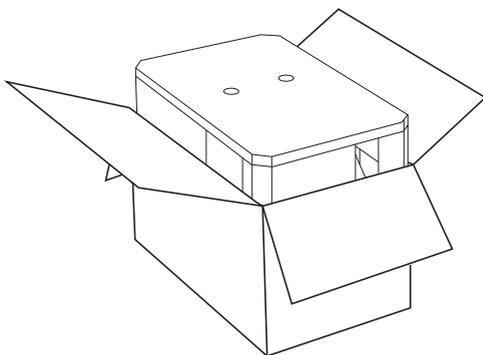


STEP 2

Remove the packaging film and the paper cover.
Accessories (wall mount) are packed in a carton.





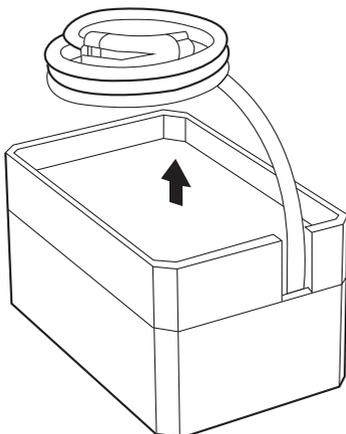


STEP 3

Remove the surrounding cardboard and film. Take out the Charger and Gun holders.

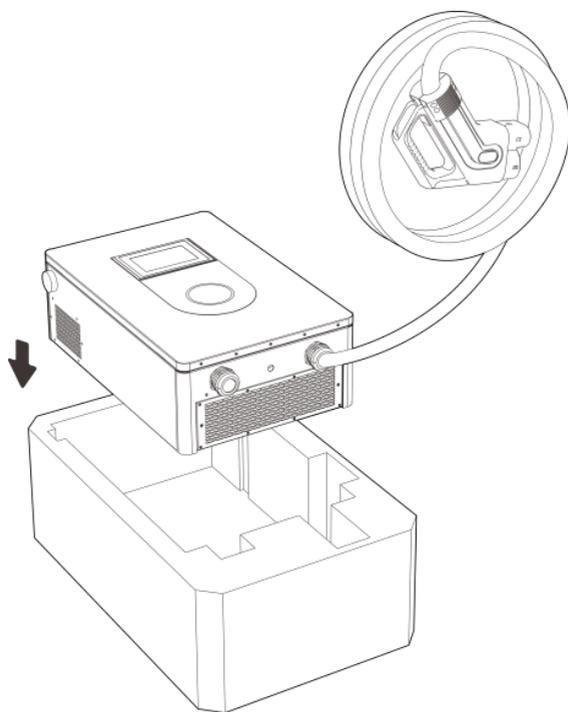

3.2 Accessory

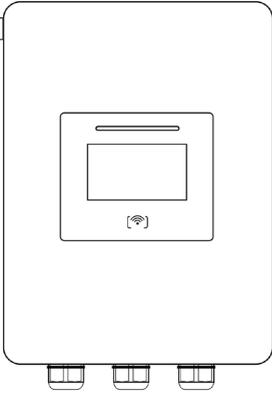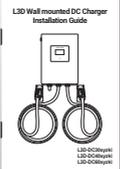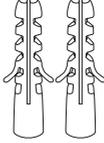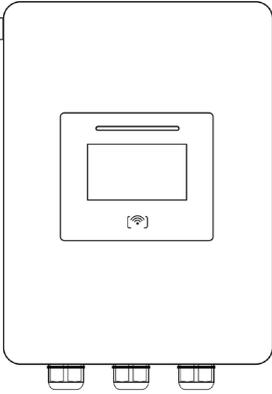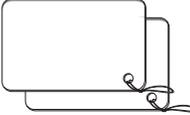			
	User Manual (x1)	φ6 Expansion Pipe (x4)	M4*40 Screw (x6)
			
	Wallbox(x1)	RFID CARD (x2)	Key (x2)

3.3 Tools for Mounting

Type	Description
Philips Screwdriver	No. 2 and 3
Shifting Wrench	8" (24mm)
Ball-Head Hex Key	2.5mm and 5mm
Socket Screwdriver	No. 8, 10 and 17
Electrical Tape	Black / 15mm Width
AC Input Cable	1AWG,105°C ,Copper
Crimping Pliers for Ring Terminal	1AWG
Machine Drill	
Wire Cutters	
Level Ruler	


3.4 Tools for Inspection

Type	Description
EV or EV Simulator	Meet CCS1 standard
Multiple Meter	1000V
Current Probe	100Amp
RFID Authorized Card	
RFID No Valid Card	
Door Key	
Needle-Nose Plier	
Laptop or PC & CAT6 cable	For Charger Configuration

3.5 Mounting on the wall or pedestal


STEP 1

Place the wall-mounted bracket between 600mm (24 inches) and 1.2m (4 feet) above the floor, and then attach 4 pcs 3/8" expansion screws to the wall-mounted bracket.

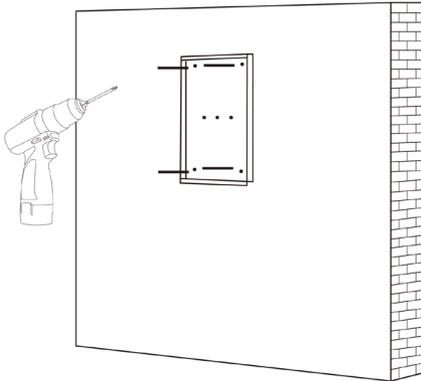


STEP 2

Install the four tenons on the rear side of the charger into the grooves on the wall-mounted bracket.

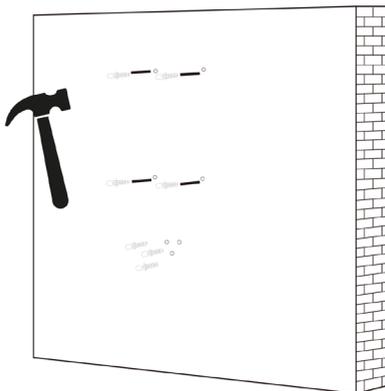


STEP 3

Screw 2 sets M6 screws to the bottom of the charger to fix the charger on the bracket.

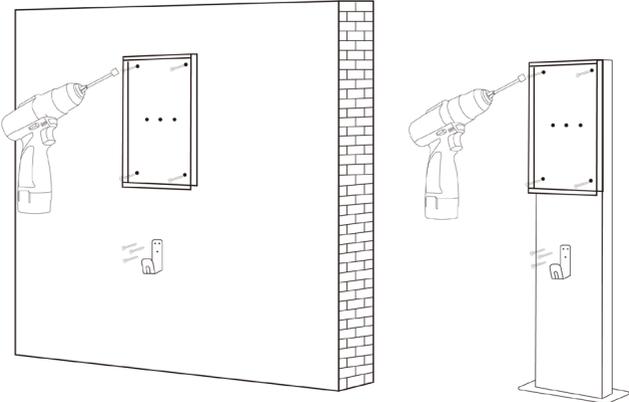


STEP 4

Keep the hook-shape holders as cable holder or disassemble them if not necessary.

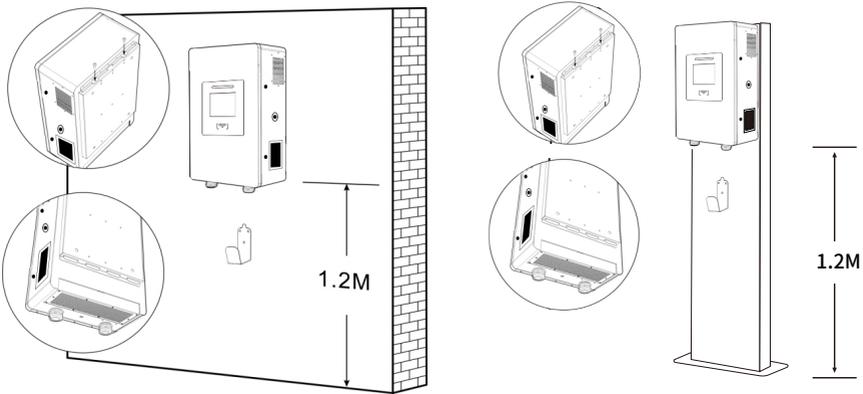

STEP 5

Please use XLPE power cables or equivalent for AC input connection, power cable outer diameter is between 32 and 40mm. Each wire shall be crimped with the corresponding terminal before feeding. And then feeding the cable from bottom side and passing through the cable gland. L1, L2, L3, N, and PE are connected to the docking terminals with torque 2.8N/m for L1, L2, L3, N, 1.5N/m for PE as shown in the figure below.

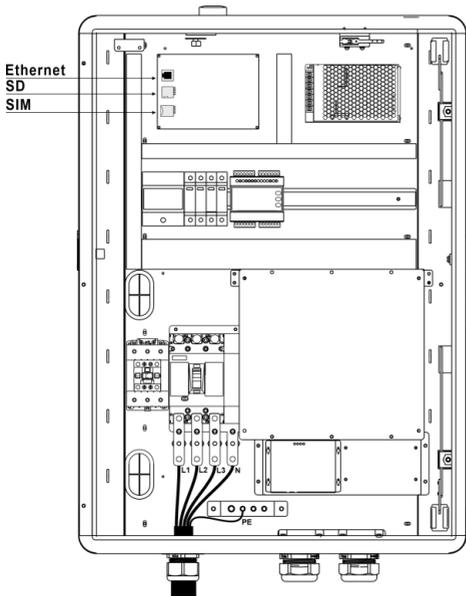


Ground Connection

- Always connect the Neutral at the service to Earth Ground. If ground is not provided by the electrical service then a grounding stake must be installed nearby. The grounding stake must be connected to the ground bar in the main breaker panel and Neutral connected to Ground at that point.
- 480Vac(Line to Line) Three-Phase

CAUTION!

This is feed from Wye-connection power grid, the Wall Mount DC Fast Charger can connect to L1, L2 or L3, and Neutral. Earth ground must be connected to neutral at only one point, usually at the breaker panel.

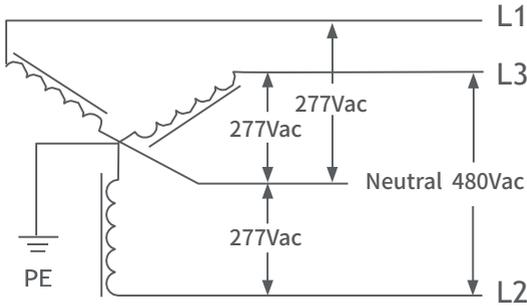

DANGERS

Be Aware of High Voltage!

WARNING!

Earth Connection is Essential!


3.6 Installation Inspection & Debugging

Description	Status	Remark
Environment		
Ambient Temperature		
Ambient Humidity		
Sunshade		Recommended but not required.
Rain Canopy		Recommended but not required.
Air Circulation / Drafty		
Dust Level		
Anti-Vandalism		
Measures		
External Infrastructure		
Input Wirings & Terminals		Type/ Length/ Cross Section
Key & Lock of Cabinet Door		
Fixing Screws		Type / No
No Fuse Breaker (NFB)		Notice: Current rating of NFB shall be higher than 63 Amp
Residual Current Device (RCD)		Notice: Maximum RCD residual current shall not exceed 30mA
Input Electricity Capacity		
Input Electricity Configuration		Wye
Grounding Resistance		<50Ω
Grounding System		
Input Voltage & Frequency		
Network Connection & Quality		LAN/ Wi-Fi/4G
EVSE (Non-Powered)		
Outlook		
Labeling & Warning Signs		
Package (Accessory) List		
Robustness of Input Wirings		
EVSE (Power On)		
Screen On		
Acoustic Noise		

Screen Display & Function		
Time Display Correctly		
Network Connection Quality		
Cooling Fans Operation & Noise		
Led Status Indication		
EVSE Setting		
Function of Engineer Mode		
Version of H.W. & F.W.		
Remote Control & Monitoring		
Backend Server Connection		
EVSE Charging		
User Authorization –RFID		
User Authorization –QR Code		
User Authorization –Others.		
Waiting Time of Connection Check		
Reading of Each Display Item		
Full Charge Test		
Function of Electronic Lock		
Reading of Engineer Mode		
Airflow & Noise of Cooling Fan		
Charging Record (log) Upload		
Remote Control & Monitoring		
EVSE System Power Button		
Emergency Stop Button		

4. Operation Process

4.1 Network Setting

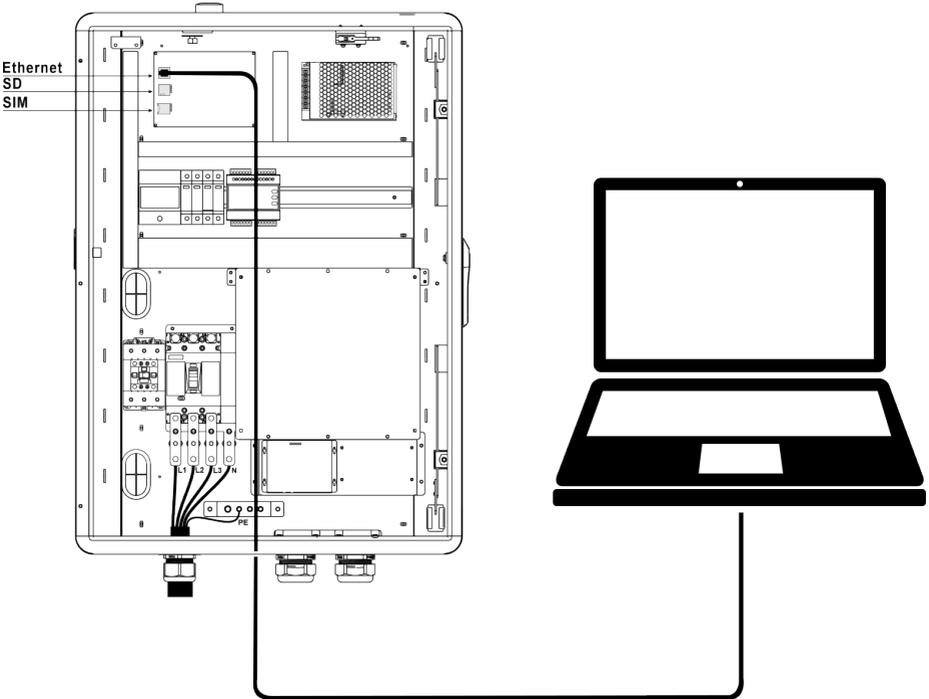

Wi-Fi Network Setting

Laptop with RJ45 interface.

Connect RJ45 cable from Laptop to charger's RJ45 port. Setup parameters in the Webservice.

STEP 1

Open web service browser, type the IP address of charger “192.168.2.5:8080” into the URL bar to access the web

page of charger.

User: admin

Password : 1234

Please Login

©2023-2030 All Rights Reserved

EVSE Web Management

Charger Parameters Information

Menu

Charger Parameters

Admin Information

Firmware Update

RFID Parameters

Firmware Version Num:	<input type="text" value="EV_CHARGER_DC_V08.02.06"/>	Language Set:	<input type="text" value="English"/>
Card Pin(6 digits, E.g:123456):	<input type="text" value="242007"/>		
Charger ID(MaxLen 18):	<input type="text" value="2448800009"/>	Max Output Power(150KW):	<input type="text" value="30.0"/>
Authentication Key(MaxLen 20):	<input type="text" value="12345678"/>	Charge Mode:	<input type="text" value="RFID"/>
Charger IP:	<input type="text" value="192.168.0.106"/>		
Subnet Mask:	<input type="text" value="255.255.255.0"/>	Default Gateway:	<input type="text" value="192.168.0.1"/>
Charger DNS:	<input type="text" value="8.8.8.8"/>	Net MAC Address:	<input type="text" value="50.88.58.BB.FA.13"/>
WiFi SSID(MaxLen 32,Not bear ','):	<input type="text" value="mate"/>	WiFi Key(MaxLen 16,Not support ','):	<input type="text" value="*****"/>
Server URL:	<input type="text" value="wss://blinkcharge.cn:443/ocpp/ws"/>	Charging Rate :	<input type="text" value="2.00"/>
4G User Name:	<input type="text"/>	4G User Password:	<input type="text"/>
4G APN:	<input type="text" value="Default"/>		

©Copyright 2024. Protection

EVSE Web Management

Menu

Charger Parameters

Admin Information

Firmware Updating

RFID Parameters

Firmware Updating Information

选择文件

未选择任何文件

submit

©Copyright 2024 Protection

EVSE Web Management

Menu

Charger Parameters

Admin Information

Firmware Updating

RFID Parameters

Firmware Updating Information

选择文件

未选择任何文件

submit

©Copyright 2024 Protection

EVSE Web Management

Menu

Charger Parameters

Admin Information

Firmware Update

RFID Parameters

RFID Parameters

RFID:

Add

选择文件

未选择任何文件

submit

©Copyright 2024 Protection

STEP 2

① Select Wi-Fi Module

Select Wi-Fi modes and fill in SSID and Password according to your application, if not required, just keep default.

② Version number, charging pile number Server address can be changed&set;

STEP 3

Set the number and type of charging piles,

Module type and number. temperature. Meter etc can be changed also;

STEP 4

Firmware Upgrade:

Select an upgrade file to perform the upgrade

STEP 5

RFID Parameters

Select the RFID file to import the binding card function

4.2 Trouble shooting

- Please follow the instruction in the table when errors occur during the charging process.
- Or please contact the DC Quick Charger provider for further instructions.
- If an emergency occurs push the Emergency Stop Button to stop charging immediately.

Error List

Screen Show	Description	Solution
1	Emergency stop	Rotate the button clockwise to reset the charger
2	CCS output fuse blew	Replace the fuse
3	AC input contactor 1 welding	Replace the contactor
4	CCS output relay welding	Replace the Relay
5	CCS connector temperature sensor broken	Replace the sensor
6	Relay control module /smart box broken	Replace the Relay control module
7	CCS Power module fault	Replace the CCS Power module
8	Maximum Output Current setup error	Reset the correct value
9	Maximum Output Voltage setup error	Reset the correct value
10	BLE module broken	Replace the BLE module
11	4G module broken	Replace the 4G module
12	Ethernet BLE module broken	Replace the Ethernet BLE
13	wifi module broken	Replace the wifi module
14	CCS connector OTP	Reset the OTP value
15	SPD trip	Replace the SPD Module
16	CCS ground fault detection timeout (GFD)	Check the Ground line
17	RFID module communication fail	Check Communication line with RFID
18	Power module communication fail	Check can line with power module
19	Door open	Closed the door &recharge with vehicle
20	System fan decay	Replace the fan
21	AC Ground Fault	Check the Ground line
22	CCSEV communication Fail	Check Connecting wire with vehicle

5. Maintenance

5.1 General Maintenance

- The DC Fast Charger is cooled by forced air. Please keep charger in a ventilated location and do not block the air vents of the DC Fast Charger .
- Please clean or replace the air filters regularly to ensure the DC Fast Charger works properly.
- Clean the DC fast Charger at least three times a year, keep the exterior clean at all times.
- Clean the outside of the cabinet with damp cloth or wet cotton towel, only use low-pressure tap water and cleaning agents with PH level between 6 to 8.
- Do not apply high-pressure water jets.
- Do not use cleaning agents with abrasive components and do not use abrasive tools . Improper cleaning agents might spoiled coating, painting, surface, bright- ness and durability of all exterior parts .
- If there is water intruding into the DC Fast Charger then please cut off the power source immediately and contact the DC Fast Charger provider for repair.
- Please make sure the charging connector is returned to the holder of the charging connector after charging to prevent damage.
- If there is damage to the charging connector, charging cable or holder of the charging connector then please contact the DC Fast Charger provider.
- When using the DC Fast Charger please handle properly. Do not strike or scrape the cabinet or touchscreen.
- If the enclosure or touch screen is broken, cracked, open or shows any other indication of damage then please contact the Standalone DC Fast Charger provider.

**WARNING:**

Danger of electrical shock or injury. Turn OFF power at the panel board or load center before working on the equipment or removing any component. Do not remove circuit protective devices or any other component until the power is turned OFF.

- Disconnect electrical power to the DC Fast Charger before any maintenance work to ensure it is separated from the supply of AC mains. Failure to do so may cause physical injury or damage to the electrical system and charging unit.

Note:

- Before switching off main breaker to begin maintenance, please record the status code number on the LCD monitor.
- After switching off the key switch the circuit before the main terminal is still hazardous. Only visual inspection can be operated.
- Maintenance of the DC Fast Charger shall be conducted only by a qualified technician.
- After opening the front door of the DC Fast Charger, turn off the main breaker and auxiliary breaker before any maintenance work.
- Replace the ventilation filter every six to twelve months.

5.2 Limited Product Warranty

The warranty period for this charger is two years.

Any spare parts provided by manufacturer and used as replacements for repair are covered by a five-year guarantee.

Replacement and repair parts manufactured by alternative manufacturers to those on the maintenance parts are only allowed if authorized by manufacturer.

Warranty Exclusions:

- Damage or rendered non-functional as a result of power surges, lightning, earthquake, fire flood, pest damage, abuse, accident, misuse, negligence or failure to maintain the product or other event beyond manufacturer reasonable control or not arising from normal operating condition.
- Cosmetic or superficial defect, dents, marks or scratches after use.
- Components which are separate from the product, ancillary equipment and consumables, such as door key, RFID card, air filter, fuse, cable, wires and connectors.
- Damage as a result of modifications, alterations or disassembling which were not pre-authorized in writing by manufacturer.
- Damage due to the failure to observe the applicable safety regulations governing the proper use of the product.
- Installed or operated not in strict conformance with the documentation, including without limitation, not ensuring sufficient ventilation for the product as described in LinkPower installation instruction.

If a defect in the product arises and valid claim is received within the warranty period, your sole and exclusive remedy will be for manufacturer, at its sole discretion and to extent permitted by law, to

1. Repair the defect in the product at no charge, using new or refurbished parts.
2. Exchange the product with new or refurbished product that is functionally equivalent to the original product.

Any remedy hardware product will be warranted for the remainder of the original warranty period or 90 days from delivery to the customer, whichever is longer.

In order to receive the remedy set for above, you must contact manufacturer during the warranty period and provide the model number, series number, proof of purchase, and date of purchasing.

